


APOGEE ACOUSTICS, INC.
APOGEE FULL RANGE RIBBON SPEAKER SYSTEM

OWNER'S MANUAL
AND
ASSEMBLY INSTRUCTIONS
APOGEE ACOUSTICS, INC.

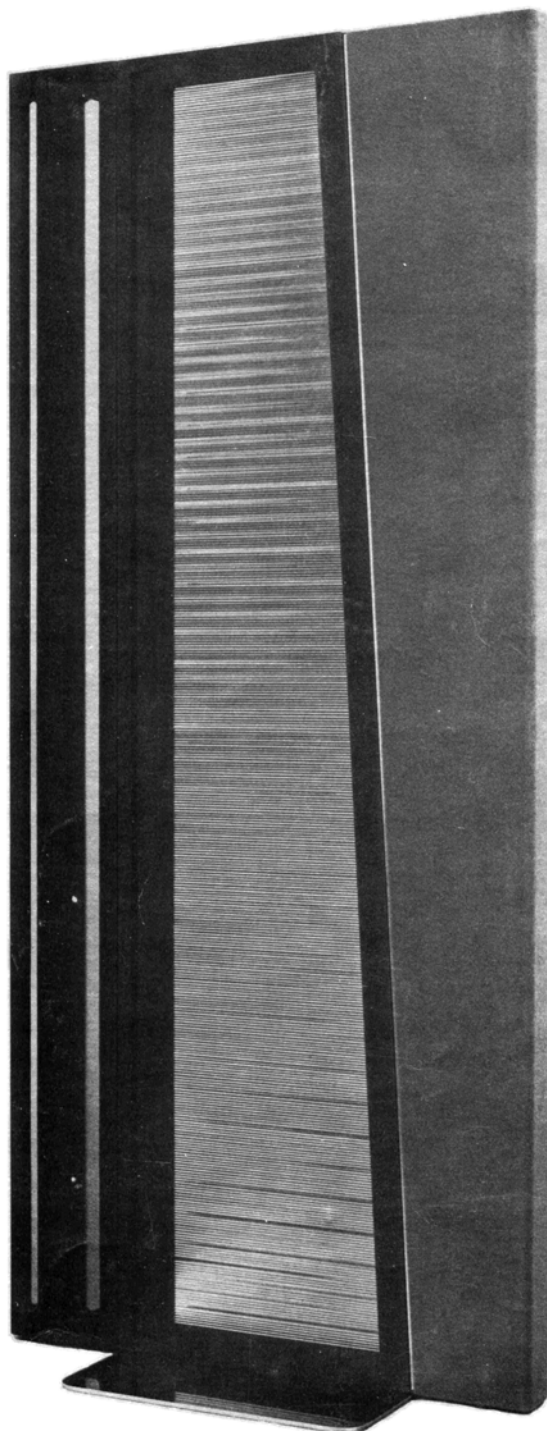

35 YORK INDUSTRIAL PARK.
RANDOLPH. MASSACHUSETTS 02368
TELEX 928121 APOGEE RAND

(617) 963-0124

APOGEE ACOUSTICS, INC.

Full Range Ribbon Speaker System.

Apogee Acoustics has resolved fundamental problems inherent to ribbon acoustical transducer design. For the first time clarity, speed and power are provided over the entire music spectrum with a full range ribbon speaker system . The combined tweeter, midrange and woofer ribbon coupled with APOGEE's own seamless crossover provide :

vanishing low distortion.
virtually flat frequency response.
no spurious coloration over entire music spectrum.
rise time consistent with the fastest amplifiers.
dynamic impact of 115 db SPL @ 4 meters on axis.

SPECIFICATIONS :

Three element system. tweeter, midrange and woofer ribbon.
Frequency response: below 25 Hz to over 30 KHz.
Sound Pressure Level: 115db @ 4 meters listening position using bi-amped 100 watt amplifiers. (14 x 27 foot / 4.3 x 8.3 meter room, geometry dependent)

Nominal Impedance: 4 ohms.
Dimensions: 80 1/2" x 35" x 4" / 205 x 89 x 10 cm.
Weight: 300 pounds / 136 Kg for each speaker.
Warranty: 5 year limited warranty.

FEATURES:

A virtually resonant free structural steel framework.
A trapezoidal thousand square inch woofer panel designed to provide a broad non-resonant frequency response.
Half inch wide tweeter ribbon and two inch wide mid-range ribbon are both eighty inches long utilizing patent filed magnetic and electromagnetic constraints that hold the ribbon within its magnetic field. This technique affords a combination of unprecedented power and clarity along with transient response and imaging . Extremely low ribbon mass permits almost instantaneous acceleration for unexcelled transient response.

The FULL RANGE RIBBON SPEAKER SYSTEM is now available in a handsome architectural design.

APOGEE ACOUSTICS, INC
920 PROVIDENCE HWY
NORWOOD, MASSACHUSETTS 02062
(617) 769-6379

Table of Contents

1	APOGEE ACOUSTICS' FULL RANGE RIBBON SPEAKER SYSTEM
2	SPEAKER SET-UP.
3	ASSEMBLY.
4	PLACEMENT.....
5	ELECTRICAL CONNECTION TO SPEAKER (See FIG. 5), BIAMP
	Operation.....
6	SPEAKER CONNECTIONS FOR BI AMP
7	APOGEE PASSIVE CROSSOVER
7.1	INTRODUCTION
7.2	LOADING RESISTORS
7.3	ADJUSTMENTS.....
8	INPUT IMPEDANCE LOADING TABLE CSI
9	SPEAKER ADJUSTMENTS
9.1	NATURE OF THE CONTROLS.....
9.2	ADJUSTMENT PROCEDURE
10	SPECIFICATIONS.....
11	LOW IMPEDANCE DIRECT DRIVE.....
12	DIRECT DRIVE HOOK-UP
13	DIRECT DRIVE RETROFIT PROCEDURE.....
14	LIMITED 5-YEAR WARRANTY
15	Full Range passive cross-over box.....

1 APOGEE ACOUSTICS' FULL RANGE RIBBON SPEAKER SYSTEM

APOGEE ACOUSTICS takes great pride in announcing a revolutionary development in loudspeaker design; the first full range ribbon speaker system. Previous sound systems have employed ribbon-technology to provide outstanding performance in the high frequency, tweeter range. Now, with the addition of APOGEE'S midrange and woofer ribbon drivers, the excellence of the ribbon is made available from deep bass, through midrange and beyond the upper frequency limits of the acoustical range.

The integration of the tweeter, midrange and woofer ribbons combined with seamless crossovers provides an outstanding clarity, resolution, spectral dispersion, depth, and dynamic range. Further, the tweeter operation as a line source reproduces the uncanny ambience of live music into your listening room.

The full range ribbon system reproduces classical music at Concert Hall sound levels but also has the dynamic range for ear splitting hard rock. The APOGEE ribbons play at a massive 115db acoustical power level at a 4 meter listening position in a 14' x 27' / 4.3 x 8.3 meter room using 100 watt per channel amplifiers in bi-amp configuration.

The system's three drivers are mounted in an architectural structure that readily fits into most living room environments. The speakers are sculptural in their appearance with dimensions of 80 inches / 205 cm in height, 35 inches / 89 cm width, and a depth of under 4 inches / 10 cm.

The geometry of the three ribbons has been scaled to provide a combination of good power handling capacity, dispersion and a balanced tonal quality over the bass, midrange and upper frequencies. The woofer averages 12 inches / 30 cm in width covering a frequency band of below 25-400HZ, the midrange ribbon is two inches in width and covers the band from 400-3,500HZ while the tweeter covers the 3,500 to well over the 30,000HZ region.

The clarity, resolution, and wide dispersion of the midrange and tweeter are provided by the use of a ribbon element, free over its entire length except for the top and bottom mechanical support. This is the theoretically perfect-approach to sound reproduction; a limp conductor placed in a magnetic field. A force is generated uniformly across the area of the ribbon when the amplifier drives current through the ribbon. Hence, sound is reproduced without the normal structural colorations of speakers that do not have a pure force over area mechanization.

The midrange dipole driver consists of a two inch wide ribbon. The line source tweeter driver consists of a pair of one half inch ribbons radiating in phase acoustical power in both the forward and rear cylinders. The line source acoustical power radiation provides impressive imaging, depth, sound stage, and live music ambience. The horizontal dispersion is essentially 360 degrees. Vertical dispersion is not an issue due to the tall line source geometry.


2 SPEAKER SET-UP.

The APOGEE speakers' performance is affected by the quality and compatibility of the front end equipment, turntable, cartridge, electronics, connections, room acoustics and the placement within the room. Care in selection of compatible equipment and placement of the speakers within the room will be very rewarding in terms of the sonic quality of your music system.

3 ASSEMBLY.

The APOGEE Speaker System is packaged in five cartons. Before opening the cartons be sure there is no visible sign of damage and the boxes are placed with the "THIS SIDE UP" marking facing up.

- 1) Check for the five boxes
2 Midrange-Tweeter Boxes (9" x 9" x 87" / 23 x 23 x 220 cm) (designation is MRT-L and MRT-R)
2 Woofer Boxes (9" x 34" x 87" / 23 x 87 x 220 cm) (designation W-L and W-R)
1 Interface Box (21" x 21" x 13" / 54 x 54 x 33 cm) (designation INT B)
- 2) Clear a 12'x12' / 360 x 360 cm area near the final speaker location to permit assembly of the speakers. (see FIG. 1)

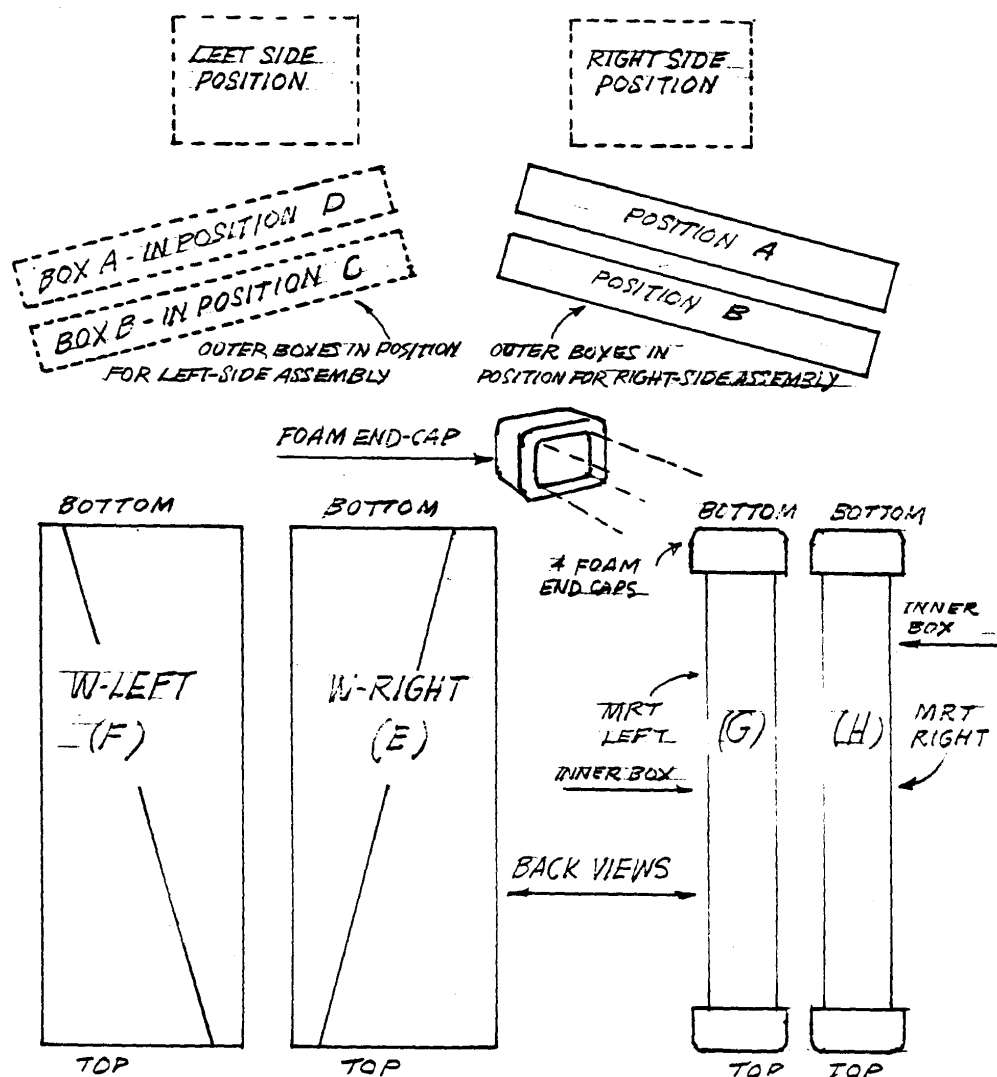

PRE-ASSEMBLY POSITIONING OF THE PARTS - FIG 1

CAUTION- USE CARE - DO NOT allow any object to touch the ribbons!

- 3) Unpack outer midrange tweeter-left, MRT-L, and MRT-R and place the outer boxes in Position A and B as shown in FIG. 1.

During the removal of the inner containers do not rotate the container (lift straight out) .
The inner containers for MRT-L and MRT-R should be placed on the floor as shown in FIG. I, position G and H.

Please note the top and bottom orientations of the containers.

The rear bottom of MRT inner box should be up.

The outer MRT boxes will be used as a work surface for the assembly of the speakers.

Clean boxes to prevent soiling the speaker grill and suede.

- 4) a) Turn right woofer, W-R, outer box upside down.
- b) Cut strapping and remove outer box.
- c) Turn inner box so that rear bottom printing is in up position and toward right speaker position.

CAUTION- Keep fingers away from ribbon.

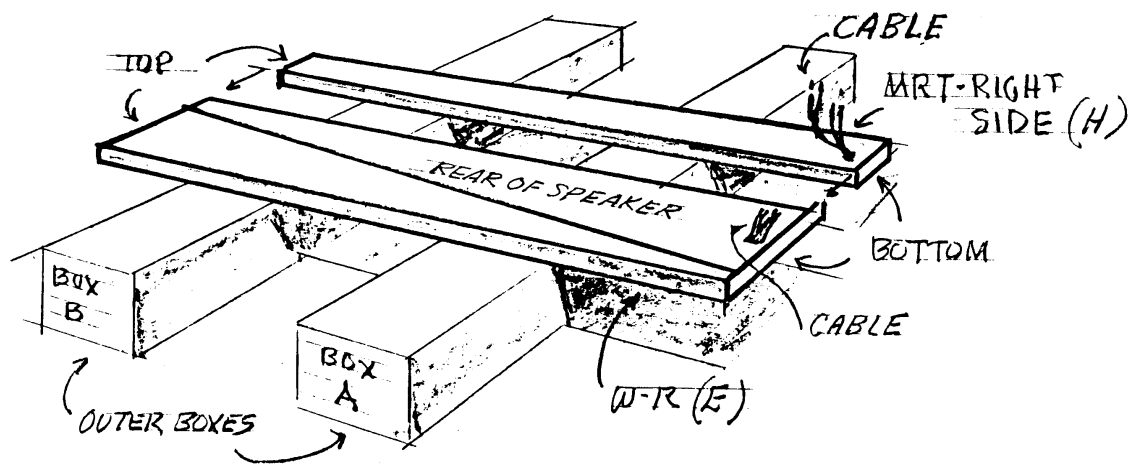


FIG. 2

- d) Lift W-R by holding at top and bottom and place on boxes A and B as shown in FIG. 2.
- e) Remove the white foam end caps.
- f) Carefully cut tape holding inner box together.
- g) Remove top and bottom corrugation piece and place in outer woofer box.
- h) Please note the bottom of the woofer is toward the right speaker position with the ribbon down and cable visible.
- i) Loosen the screws nearest to the MRT to make the MRT/woofer assembly easier.
- 5) Place the right midrange tweeter, MRT-R on boxes A and B.(see FIG. 2) . The bottom of the MRT-R should be toward speaker position.
 - a) Remove the white foam end caps.
 - b) Remove top and bottom corrugations.
 - c) Do not rotate MRT during this procedure.
- 6) Carefully move the midrange tweeter toward the woofer until they butt. Two people should be involved in this process. Do not slide the midrange tweeter but lift gently for this process.
- 7) Assembly of woofer and MRT.
 - a) Align the 2 holes in the Top and Bottom steel plates. Use the Drift Punch located between the two holes for the alignment.
 - b) Screw MRT and Woofer together with 3/4" long 1/4-20 flat head Cap Screws. A "T" handle wrench is provided for this purpose.
 - c) Insert and turn screws 3-4 turns until all 4 screws are started then evenly tighten all 4 screws.
 - d) Tighten the screws loosened under item 4 to facilitate the MRT and Woofer assembly.
- 8) Open the Interface Box.
 - a) Remove the transformer boxes and place aside.
 - b) Remove Base Plates from interface box, - note Base Plates have a protective plastic

coating - peel off coating.

c) Place right Base Plate on floor between Box A and the right speaker position.

9) Attach base plate to woofer.

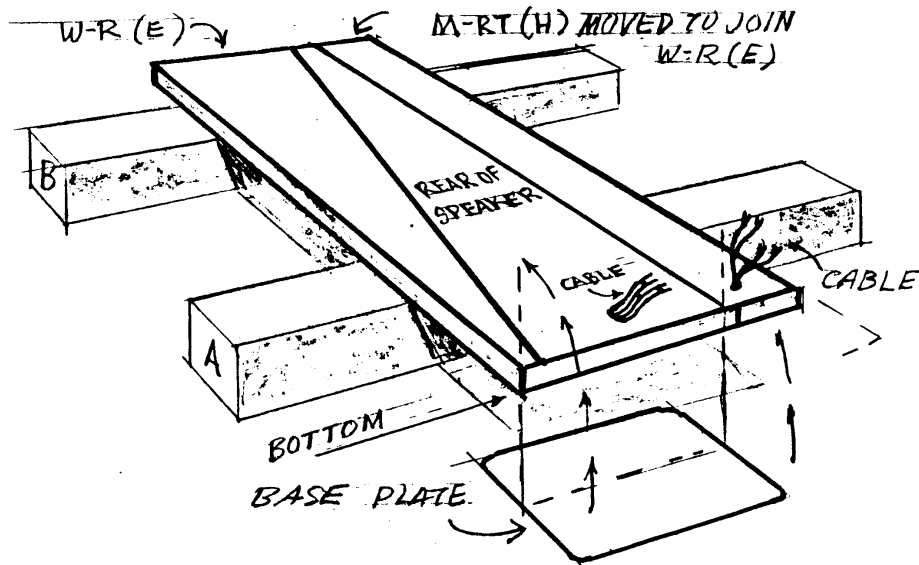


FIG. 3

FIG. 4

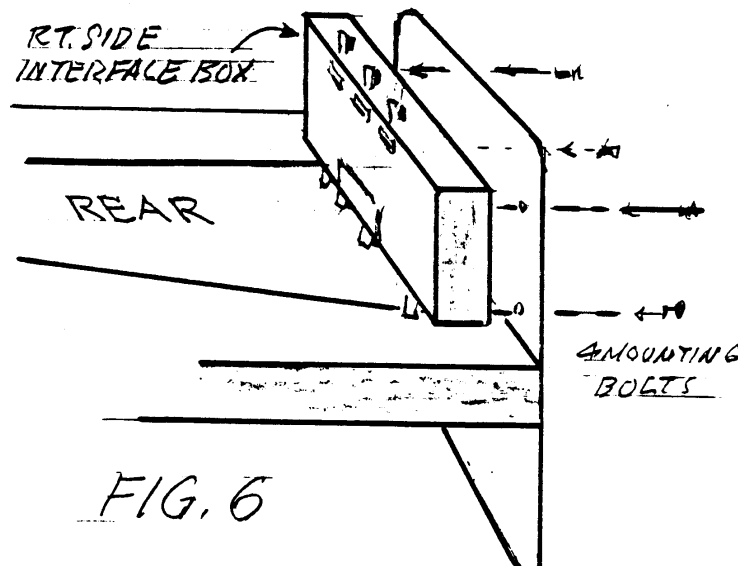
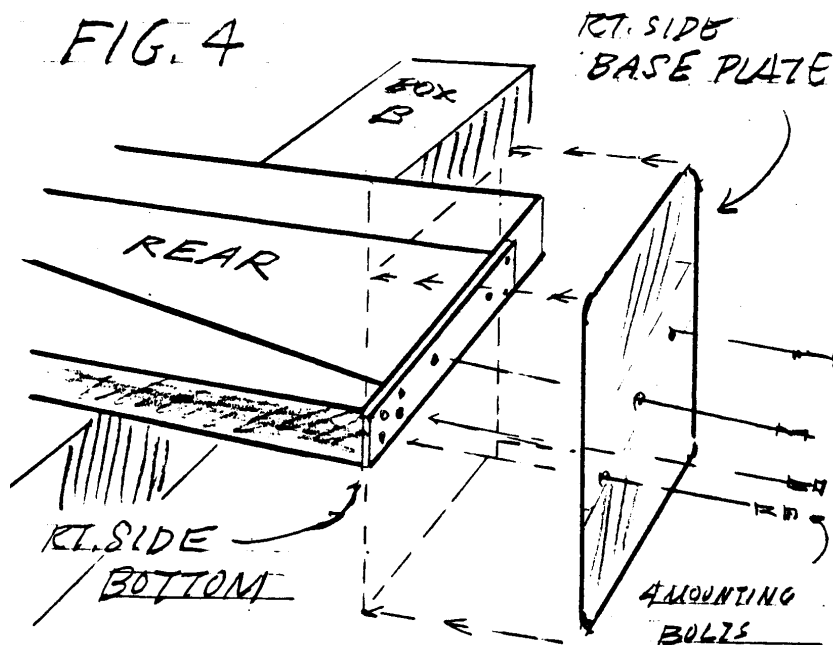


FIG. 6

- a) Use the T-Handle wrench and 1/2" long 1/4-20 Flat Head Socket Screws, and secure base plate to woofer of speaker using 8 screws. The base plate is oriented as shown in FIG. 3 and 4 with the bottom of the base plate seen from the right speaker position. The mounting holes for the transformer are behind the speaker.
- b) Align holes with the Drift Punch. Two people are needed, one to hold base plate, the other to start screws. Start all eight screws 2-3 turns each and then tighten uniformly.
- 10) Attach right transformer box to the base plate.


- a) Orient the right transformer box (woofer plate on lower left when viewing transformer box so that nameplate reads upright.) See FIG. 6.
- b) Secure with 1/2" long 10-32 flat head cap screws at each of four corners. Start all the screws 2-3 turns and then uniformly tighten each screw.
- 11) Attach back brace.
- a) Remove back brace from plastic bag.
- b) Bolt it to the speaker using a 2 1/4" long 1/4-20 socket head bolt.
- c) Bolt it to the base plate using a 1/4-20 by half inch flat head bolt.
- d) Attach the leveler bolt to base of MRT. Turn all the way in and then adjust to level speaker.

CAUTION!! Do not lift or move speaker unless back brace is securely bolted in position.


12) PLACEMENT.

13) Placing speaker upright.

This procedure requires two people with clean hands. The stronger person should be positioned to lift the top section of the mid-range tweeter while the other person should be positioned to lift the top section of the suede covered ear. A rubber mat should be placed between the floor and the front edge of the base plate (see FIG. 7) to protect the floor and base plate and prevent slippage.

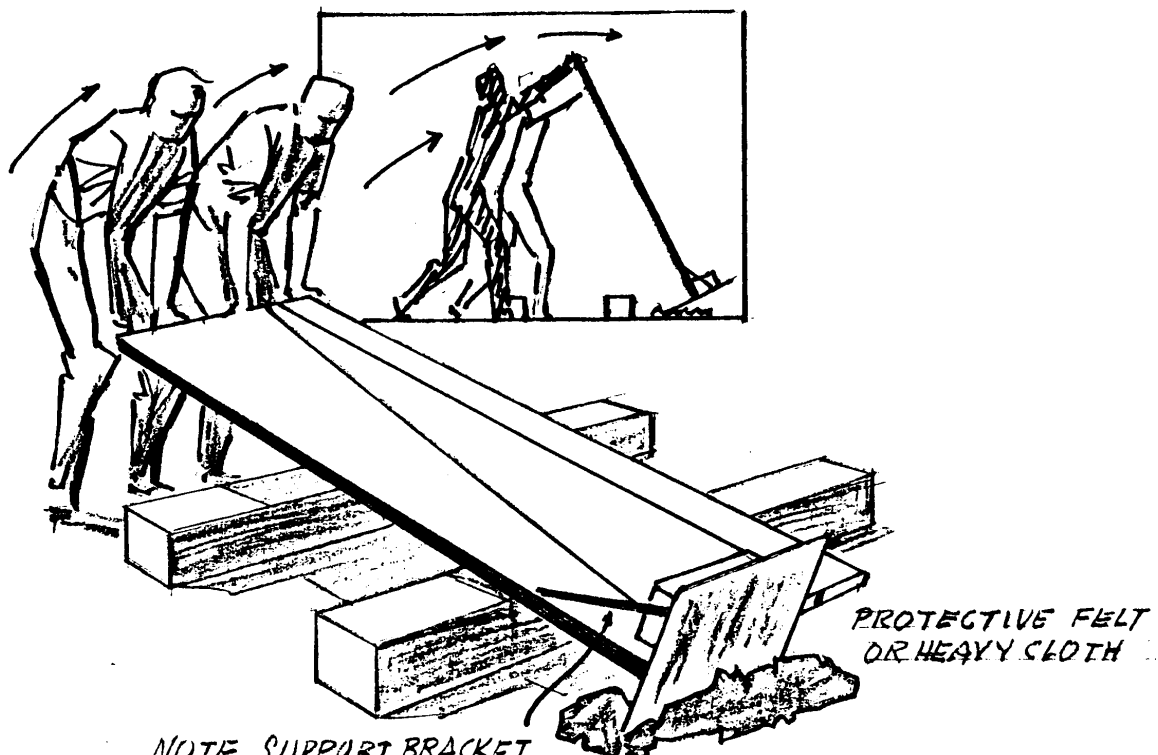

NOTE SUPPORT BRACKET.
NEVER LIFT OR MOVE UNIT
WITHOUT SUPPORT BRACKET IN PLACE
LIFTING & POSITIONING FIG. 7

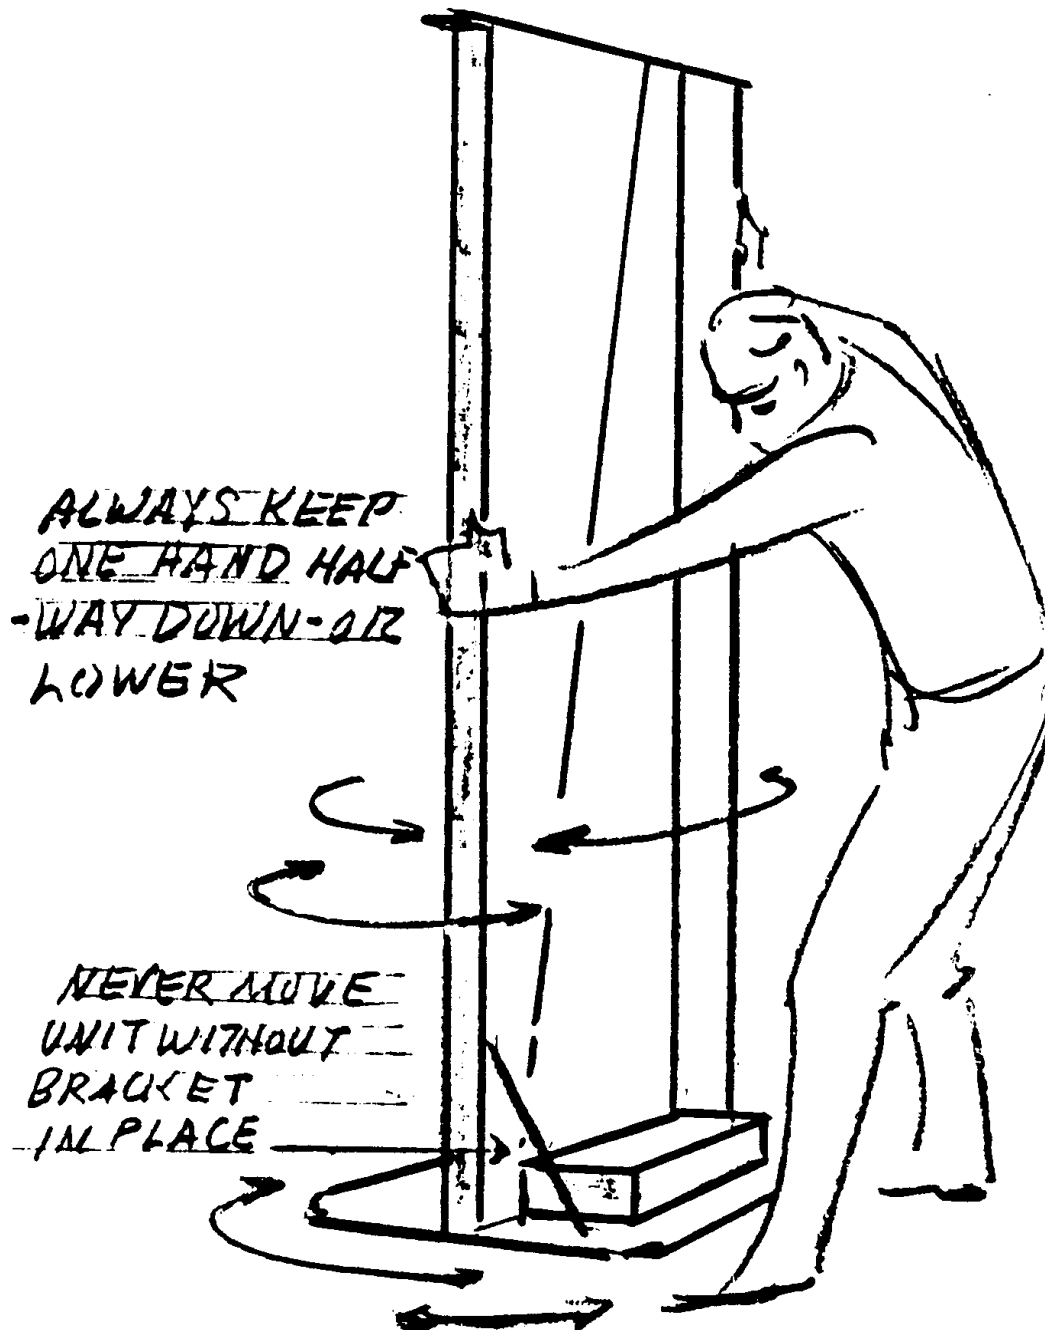


PIVOTING INTO POSITION - NO. 8

CAUTION!! Keep fingers clear of ribbons. Use care as speaker weighs 300 pounds / 136 Kg. Securely holding the top half of the midrange tweeter and the top half of the suede ear slowly rotate the speaker into the final upright speaker position (FIG. 7).

- 14) Move speaker to the nominal right speaker position in the room (see FIG. 8).
 - a) Speaker may be readily moved by use of a series of rotations about the vertical axis of the speaker.
 - b) Hold speaker with left and right hands at positions a and b.
 - c) Rotate about left corner of speaker by holding left corner of speaker and pushing on right corner. (Hands should be held relatively low to minimize the overturning forces).
- 15) REPEAT the procedure for the Assembly of the left speaker.
Start by moving the A and B boxes to position C and D as shown in FIG. 1.

4 ELECTRICAL CONNECTION TO SPEAKER (See FIG. 5), BI-AMP Operation

FIG. 5

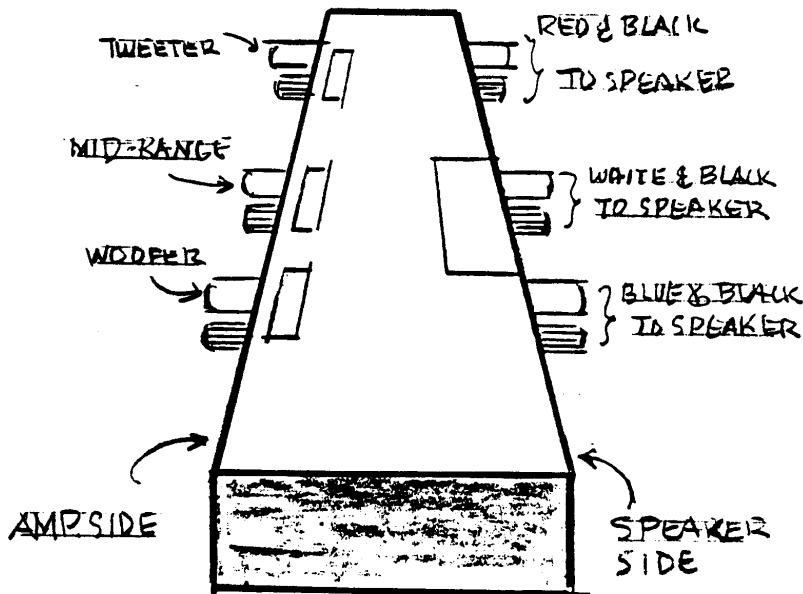

LEFT INTERFACE BOX

(Note: RIGHT INTERFACE BOX IS THE EXACT REVERSE OF THE ABOVE)

- 1) CONNECT crossover between Pre Amp and Power Amps.
- 2) For APOGEE crossover go to Step 3. For other manufacturers follow instruction with unit. Note the woofer/midrange crossover frequency is 400 HERTZ and the slope is 6 db/octave.
- 3) Connect Preamp Output to crossover input. Connect Lo output to woofer Amp input and Hi output to MRT Amp input. Make sure that the crossover loading resistors are installed. - See passive crossover section of this manual.
CAUTION!! Prior to making power amplifier connections to the speaker ensure that all front end connections have been properly made in full accordance with manufacturers instructions. Pre Amp gain should be set low and then adjusted to listening level. Do not make front end system changes while the power is on and speaker connected. All such changes should be made with power off and speaker disconnected.
- 4) Connect the Left channel woofer amplifier to the terminals labeled "Woofer" of the Left speaker transformer box.
- 5) Connect the Right channel woofer Amp to the terminals labeled "Woofer" of the Right speaker transformer box.
- 6) Connect the Left channel of the Midrange/Tweeter Amplifier to the terminals labeled "Midrange" DO NOT CONNECT anything to the Tweeter terminals. The midrange and tweeter crossover are contoured within the transformer box.
- 7) Connect the Right channel of the Midrange/Tweeter Amplifier to the terminals labeled "Midrange" of the right speaker transformer box.

5 SPEAKER CONNECTIONS FOR BI AMP

- 1) Connect the woofer cables to the woofer binding posts of the transformer box. Blue cable to blue binding post and black cable to black binding post.

- 2) Connect the MR cables to the MR binding posts. White cable to white post and black cable to black post.
- 3) Connect the Tweeter cables to Tweeter binding posts. Red cable to red post and black cable to black post.

USER'S NOTE: In the basic set-up, the TW input terminals on the passive cross-over box are not connected to anything. For tri-amp operation the internal wiring of the passive cross-over box must be changed. In the normal bi-amp operation the tweeters are fed via the MR/TW input on the passive cross-over box.

GENERAL CARE

- 1) The grill may be cleaned with a soft dusting brush.
- 2) The suede may be cleaned with a suede brush - be careful not to abraid.
- 3) The base may be polished using a glass cleaner and soft cloth or paper toweling.

CAUTION! !! Do not vacuum grill as vacuum may damage ribbons.

6 APOGEE PASSIVE CROSSOVER

6.1 INTRODUCTION

The Apogee passive crossover is designed to provide the electrical separation of woofer and midrange-tweeter signals. This is accomplished at signal levels between the pre-amplifier and power amplifiers in a manner to provide the most coherent and musically accurate result. This passive approach requires selection of loading resistors to provide the ultimate performance.

6.2 LOADING RESISTORS

These resistors are chosen according to table CX-1 depending upon amplifier listed in the table for convenience. If your amplifier is not listed, consult your Owner's Manual, or your local dealer.

The load resistors may be changed by removing the bottom panel of the crossover. They are soldered to gold plated pins/sockets for easy removal. All crossovers are shipped standard with 20 Kohm input impedances. Others should be changed according to table CX-1. Resistors pre-soldered to gold pins are available from your local dealer. These resistors are shown as RHI & RLO in figure CX-1. RHI is chosen according to the input impedance of the midrange-tweeter amplifier while RLO is selected according to the input impedance of the bass amplifier.

6.3 ADJUSTMENTS

The system balance between bass and midrange-tweeter is adjustable via the front panel controls. These attenuators provide 11 dB of attenuation in 1 db steps. When the attenuators are set to "0", the crossover will provide 6 db more gain to the midrange-tweeter than the woofer amp. This will be modified by any gain change between the bass amp and midrange tweeter amps. For amplifiers of equal gain, position "7" or "8" is expected to provide proper balance .

7 INPUT IMPEDANCE LOADING TABLE CSI

The crossover input impedance is 10K OHMS. This is expected to function properly with most modern pre-amps. Some pre-amps may function properly into a 50 K OHM load. Apogee also offers such a unit. Consult your local dealer if you have questions.

TABLE CX-1

Amplifier	Amplifier Impedance Load Resistor RHI & RLO
Spectral DMA-100	10K NONE
Perreau 2150	10K NONE
ML-3	20K 20.0K
Krell (ALL MODELS)	22K 18.2K
Bryston ML- 9	50K 12.4K
4B	50K 12.4K
D-90	50K 12.4K
Threshold	75K 11.5K
ML-2	100K 11.0K
Quicksilver	200K 10.5K

8 SPEAKER ADJUSTMENTS

The performance of the Apogee Ribbon Speaker will respond to adjustments that can be made in three separate ways.

The first way that adjustments may be made is by speaker position within the room. This is room dependant and primarily affects the open-ness and correctness of the sound image. Large changes in the speaker position will affect the frequency balance.

The second adjustment is the crossover gain - controlled by a rotary position switch.

The third adjustment is the tweeter balance which is controlled by a toggle switch on the rear of the transformer boxes. These three adjustments should allow the user to obtain an accurate image field recreating the original music with proper bass - mid-range- and tweeter frequency balance under most conditions.

8.1 NATURE OF THE CONTROLS

The exact nature of the adjustments is as follows: The cross-over gain rotary switch operates to attenuate the gain of the mid-range/tweeter. Unity gain occurs with the rotary switch in the # 6 position. Each counterclockwise detent represents 1 db of attenuation from 400 HZ to above 200 KHZ. It should be noted that this control attenuates both the midrange and tweeter relative to the bass.

The tweeter control is operated by a toggle switch on the rear of the transformer box. The normal position is with the switch down. With the switch up, a 1 1/2 db response gain is added from 10 KHZ to above audibility. With the switch in the MID position, a 1 1/2 db response attenuation is implemented.

8.2 ADJUSTMENT PROCEDURE

Start with the speakers positioned as follows:

- 41 1/2" / 106 cm from rear wall to back of tweeter
- 42" / 107 cm from rear wall to back of ear (baffle)
- 6 1/2 feet / 2 meters apart - between inside edges

Start with the tweeter switch down:

Start with the crossover gain six clicks down (CCW) from maximum (-6db) - for amps of identical gain. For others, adjust as necessary. Play your favorite source material with full frequency content. Adjust the crossover gain until the bass and midrange balance is correct. This is best determined by listening for the proper amount of bass. As the midrange is attenuated the bass will increase relative to the midrange. When satisfied with the bass/midrange balance, move on to the tweeter balance. Again, while playing your favorite source material, adjust the tweeter to full maximum {switch up} or minimum {switch in middle} to achieve the proper "Air" to the music.

9 SPECIFICATIONS

FULL RANGE RIBBON SPEAKER

Three element system - Woofer - Midrange - Tweeter

Frequency response - below 25- 30 KHZ

Sound Pressure Level: 115 db at 4 meter listening position in a 14 by 27 foot / 4.3 x 8.3 meter room utilizing 100 watt amplifiers, bi-amped.

Nominal Impedance: 4 ohms

Dimensions: 80 1/2" x 35" x 4" / 205 x 89 x 10 cm

Weight: 300 lbs / 136 Kg (Net weight for one speaker with interface box)

Warranty: 5 yr. limited warranty, see statement for details.

APOGEE Acoustics, Inc.

35 York Avenue Randolph, MA 02368 Phone: 617/963-0124

10 LOW IMPEDANCE DIRECT DRIVE

Introduction & Description

The APOGEE Acoustics Direct Drive is an alternate embodiment of the speaker. It is intended to take advantage of certain low power Class A Amplifiers with exceptional sonic merits, and still provide adequate dynamic range for most music. These amplifiers are capable of driving a 1 ohm load with no problem. If you have questions as to the adequacy of a particular product, consult your dealer or amplifier manufacturer.

The characteristics of the APOGEE Direct Drive are summarized as follows:

- 1) Typical Peak SPL's of 110 db with 25 watt Class A amplifiers into 8 ohms.
- 2) Speaker has a nominal impedance of 1.6 ohms.
- 3) Woofer and Tweeter are transformer-less.
- 4) All speaker connections are with Fisher Speaker Connectors.
- 5) The Passive Crossover supplied must be used for proper contouring.
- 6) Midrange / Tweeter adjustment resolution is 1/3 db.

11 DIRECT DRIVE HOOK-UP

Connection of the Direct Drive is as follows:

- 1) All connections to the Interface Box follow the convention: Red Right / Black Left.
- 2) Connect the Woofer directly to the bass Amp using the Fisher Connector.
- 3) Connect the tweeter to the Interface Box using the Fisher Connectors. NOTE: Red Right / Black Left.
- 4) Connect the Midrange to the Interface Box using the Fisher Connectors. NOTE: Red Right / Black Left.
- 5) Connect the Interface Box to the MRT power Amp using the Fisher Connectors. NOTE: Red Right / Black Left.
- 6) Check the phasing & Hook-up according to the accompanying figure.
- 7) Re-check the connections.

NOTE: For tri-amp direct drive, connect MR/TW power Amps per designation on the Interface Box.

All APOGEE Full Range Ribbon Speakers may be retrofitted with direct drive technology. See your dealer for details.

12 DIRECT DRIVE RETROFIT PROCEDURE

The following assembly steps are to be done prior to hookup of the direct drive on those systems being retrofitted from the standard 4 OHM speaker:

- 1) Measure each midrange cable and mark at 10 1/4" / 26 cm with a black magic marker. (Black and white lugs)
- 2) Check to make sure that you have selected the midrange.
- 3) Cut the white wire at the mark. at this time. Do not cut the black lead
- 4) Strip 3/8" / 1 cm of insulation off the wire and separate the cables by cutting the web for 3" / 8 cm.
- 5) Place the red Fisher cap on the cable. It may be necessary to open the nylon bushing with an exacto knife.
- 6) Solder the Fisher speaker connector to the speaker wire. Clean with flux remover.
- 7) Cut the black wire at the mark.
- 8) Repeat steps 4, 5, and 6 for the black wire using the black Fisher cap.
- 9) Repeat steps 1-8 for both midrange speakers.
- 10) Measure each tweeter cable and mark at 6 1/2" / 16 cm with a magic marker.
- 11) Cut the red lead. Do not cut the black lead.
- 12) Strip 3/8" / 1 cm of insulation from the red lead and separate the cables by cutting the web for 3" / 8 cm.
- 13) Place the red Fisher cap on the cable. It may be necessary to open the nylon bushing with an exacto knife.
- 14) Solder the Fisher speaker connector to the speaker wire. Clean with flux remover.
- 15) Cut the black wire at the mark.
- 16) Repeat steps 12, 13, and 14 for the black lead using the black Fisher cap.
- 17) Repeat steps 10-16 for both tweeter speakers.
- 18) Proceed to the hookup instructions under the low impedance direct drive section.

13 LIMITED 5-YEAR WARRANTY

APOGEE ACOUSTICS INCORPORATED warrants to the purchaser that the APOGEE Full Range Ribbon Speaker System to be free of defects in materials and workmanship for a period of five years from date of purchase.

To obtain this warranty, the original purchaser must mail to APOGEE ACOUSTICS within thirty (30) days of the date of purchase this warranty registration form completed, dated and signed by both the purchaser and the selling dealer together with a copy of the bill of sale or other proof of purchase of the product.

APOGEE ACOUSTICS will then validate the warranty to the original purchaser. This warranty is subject to the following conditions and limitation. This warranty applies only to the original purchaser. The warranty is void and inapplicable if the product has been handled other than in accordance with the instructions in the owner's manual, abused or misused, damaged by accident or neglect or in being transported, or the defect is due to the product being repaired or tampered with by anyone other than APOGEE ACOUSTICS or an authorized APOGEE ACOUSTICS repair center.

The warranty does not cover normal maintenance.

APOGEE ACOUSTICS INC. shall not be responsible in any way for consequential or indirect damages or liabilities resulting from the use and operation of the product covered herein or resulting from any breach of this warranty or any implied warranty relating to said product.

The speaker system must be packed in an APOGEE SHIPPING CONTAINER that is in good condition, and shipped to the designated APOGEE repair center or factory. All Freight and Insurance costs shall be prepaid by the owner. A returned product should be accompanied by the warranty and a written description of the defect.

Some states do not allow exclusion of limitations of incidental or consequential damages so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

This is a limited warranty only and there are no express or implied warranties of any kind not set forth above, unless your particular state law provides otherwise. There is no implied warranty of fitness for the purpose, nor is there any implied warranty of merchantability.

Date_____

Dealer_____

Purchaser_____


Speaker Serial
Number_____

APOGEE ACOUSTICS. INC.

35 YORK INDUSTRIAL PARK,
RANDOLPH, MASSACHUSETTS 02368
TELEX 928121 APOGEE RAND
(617) 963-0124

14 Full Range passive cross-over box

This chapter describes the innards of the passive cross-over box. The contents of this chapter originated outside APOGEE. It therefore should be used with CAUTION.

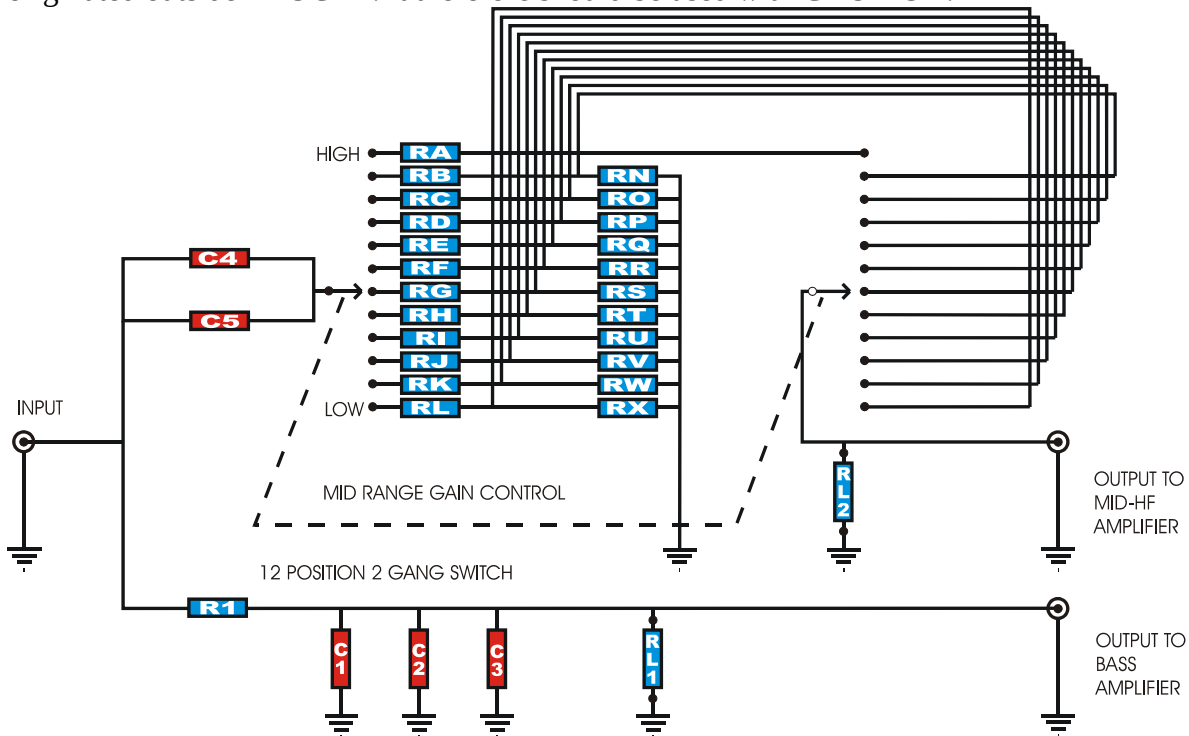

R1 = 9K53	RN = 82K5
RA = 0 OHMS (wire jumper)	RO = 38K3
RB = 1K07	RP = 3K92
RC = 2K05	RQ = 4K64
RD = 7K15	RR = 5K49
RE = 6K81	RS = 6K65
RF = 6K49	RT = 8K06
RG = 6K04	RU = 10K
RH = 5K49	RV = 12K7
RI = 4K99	RW = 17K4
RJ = 4K32	RX = 24K3
RK = 3K65	
RL = 2K94	

(all 0.25 watt 2% or better) (I would use 0.1%)

C1,C2,C3 + C4 = 27000 (160v)

C5 = 15000 (630v)

These caps look like polystyrene, the 630V need only be 160V (since its in parallel to a 160V). I think the valves are picofarads but I'm not sure. All there is "27,000" + "15,000", a "H", and the voltage. Crossover points should be 400Hz approximately.

- 1) RLI and RLZ are amplifier impedance matching resistors – to find values refer to manual. In stock crossover those resistors are socketed to facilitate exchange.
NOTE: they are noted RL1 and RL2 in the above figure, RHI and RLO in the manual text?
- 2) Ground is PCB ground and is NOT connected to Chassis.

- 3) Switch is for mid-tweeter gain control to facilitate use of different power amps. Could be omitted if using 4 channels the same – but I still used it when I had 4 identical channels.
- 4) All connections are gold including load resistor sockets.
- 5) RA is a wire jumper (ie 0 ohms).
- 6) Rb to Rx (resistor array) is designed so as not to alter crossover points ie. High pass is the same whatever the gain setting.
- 7) “Gain” (see 3 + 6) is a misnomer really should be “attenuator”.